5128 Air Compressor Pump
Non Return Valve Kit Z5128-250

ERNEST H. HILL LTD • SHEFFIELD
www.airriflepump.com

Kit comprises of 5mm allen key,1 large o-ring,1 spring,
1 non return valve and o-ring, 1 micron filter and 1 bleed screw seal

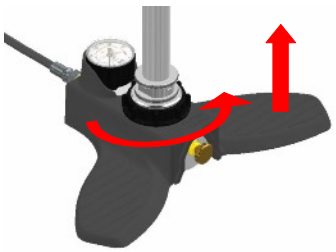

A1. Unscrew and lift foot plate up

How to replace non return valve

A2. Remove 4 bolts with supplied allen key

A3. Remove spring, o-ring and non return valve, and replace with new parts

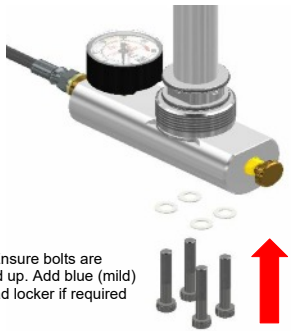

A4. Replace 4 bolts and washers
Using 5mm allen key

How to replace bleed screw seal

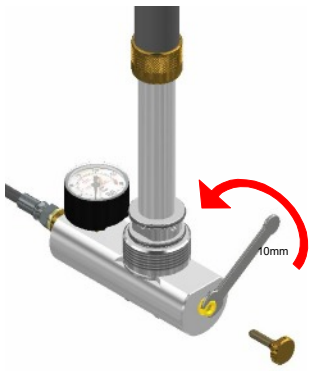

B1. Remove seal retainer with 10mm socket or spanner

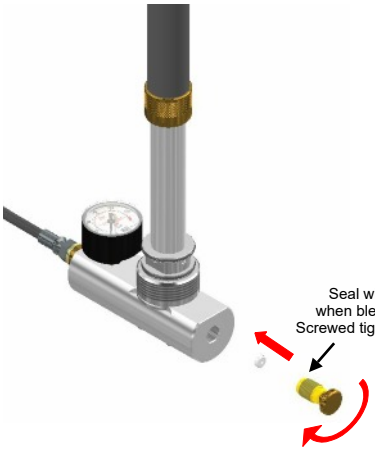

B2. Screw bleed screw into seal retainer to remove seal. Replace seal if needed

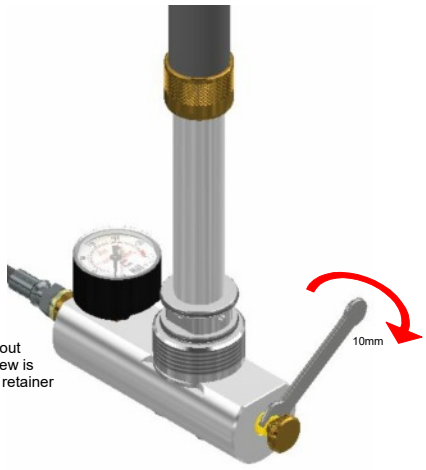

B3. Reinstall seal retainer **do not overtighten**

How to replace micron filter

C1. Remove hose end adapter with 15mm spanner

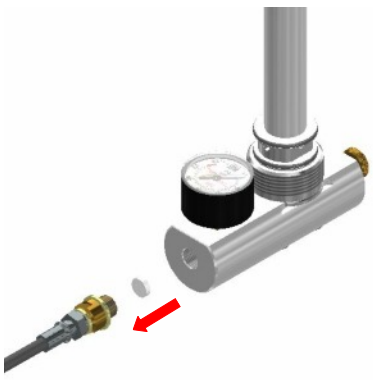

C2. Remove filter using suitable tool

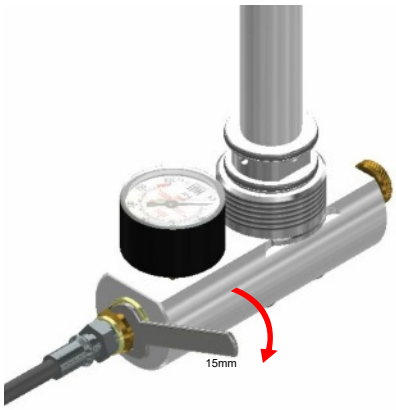

C3. Replace filter and reassemble Spanner tight